

Barrier MHTM™ MicroDrive

ACCESS

ACCESS PRO

ACCESS SELECT

PARKING

PARKING PRO

PARKING SELECT








WARNING!

These instructions are short instructions. These instructions do not replace the operating instructions "MHTM™ MicroDrive" (Doc.-ID: 5815,5001) that are part of the delivery.

These short instructions are targeted at specialists who already have experience with assembly, installation and commissioning.

For detailed information, see the operating instructions. Read the operating instructions carefully before commencing any work. The prerequisite for secure work is compliance with any safety notes and instructions for actions included in the operating instructions.


The manufacturer is not liable for any damage from improper or nonintended use.

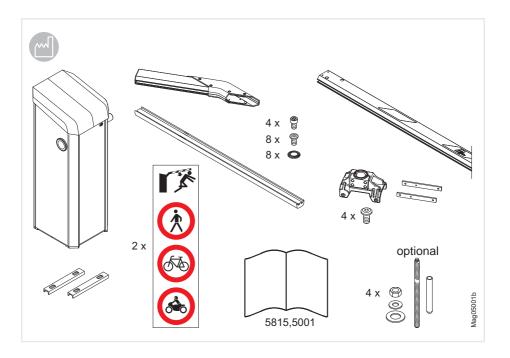





Required tools		
	Impact drill	10 mm
	Saw	_
Silicone	Silicone cartridge	-
	Open-face wrench	13 mm
	Torque wrench, hexagon socket	5 AF
	Torque wrench, hexagon socket	10 AF
0	Torx wrench	T20
0	Hexagon socket wrench	4 AF
	Phillips screwdriver	for 3.5 mm
	Diagonal pliers	_



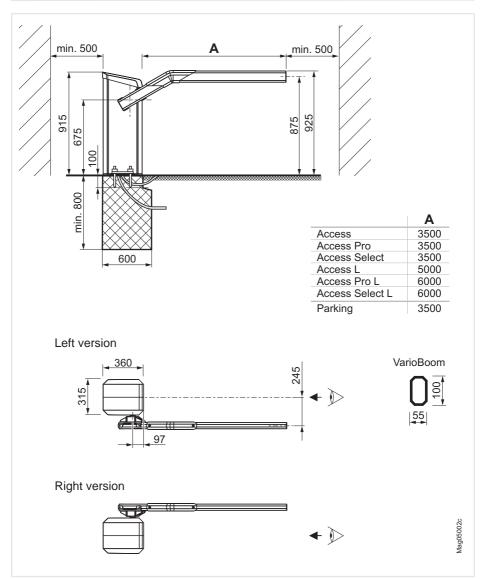





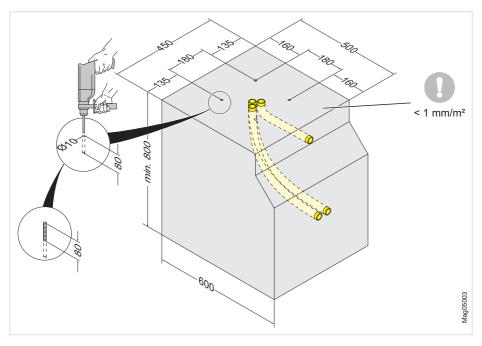

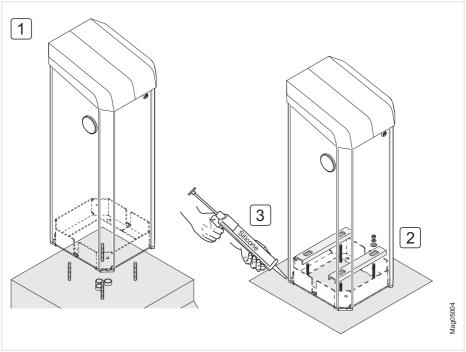




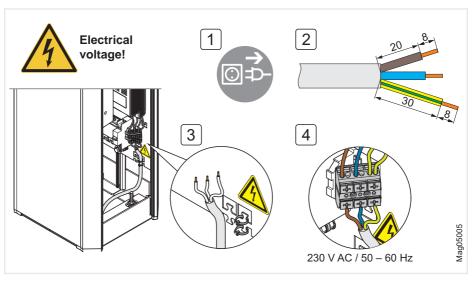


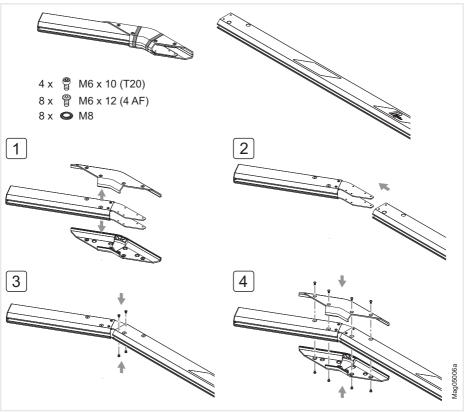




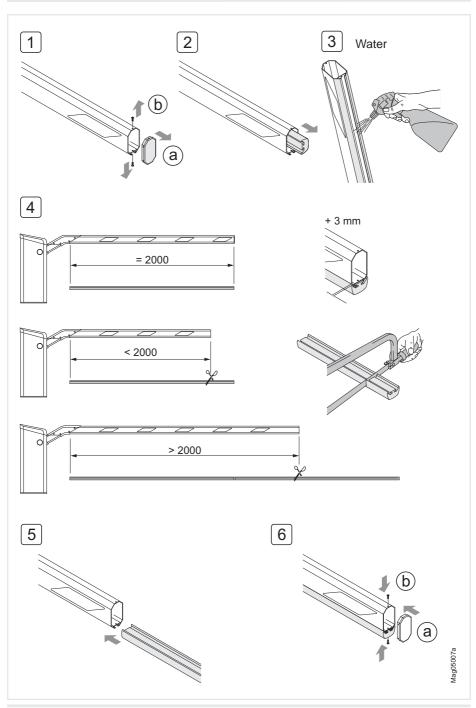



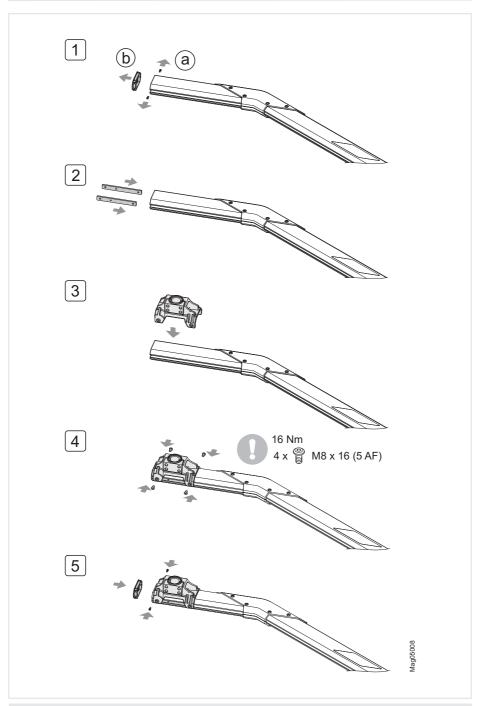





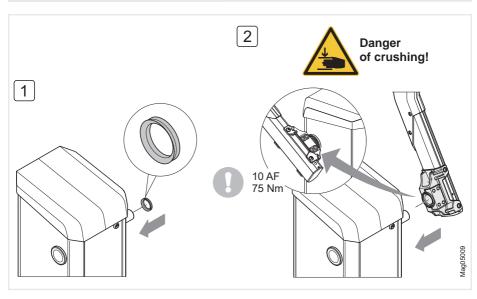






 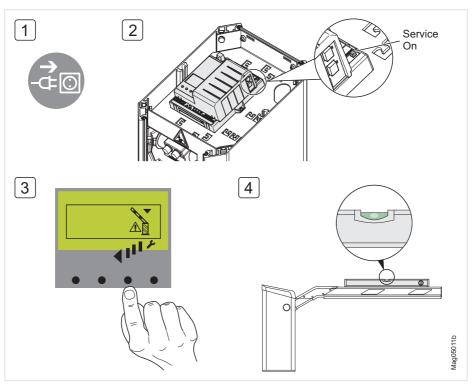


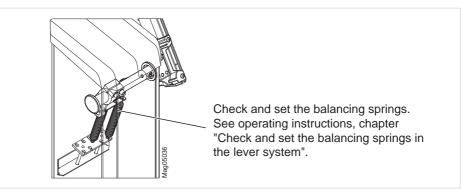





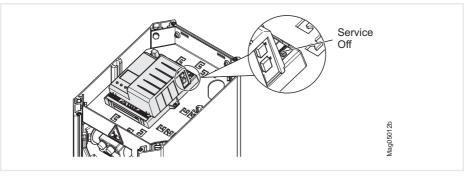



MAGNETIC Autocontrol GmbH

Grienmatt 20

79650 Schopfheim

Germany

Tel.: +49 (0) 7622 695 5 Fax.: +49 (0) 7622 695 602 info@ac-magnetic.com www.ac-magnetic.com